


External Temperature Probe

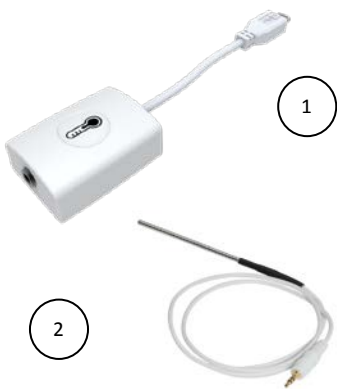

Specification

1. Probe range: -25 to 125 °C
2. Probe accuracy: ± 2 °C

What's in the Pack

- ① Temperature probe adapter
- ② Temperature probe

Preparing the Probe


1. Connect the Temperature probe adapter to the Micro-USB external probe socket on the Ward's DataHub. Make sure that



the USB sign on the adapter cable connector is facing up.

2. Connect the Temperature probe to the other end of the Temperature probe adapter.

Using the Temperature Probe with the Ward's DataHub

1. Turn on the Ward's DataHub.
2. Click on the probe key  located above the external probe socket where the Temperature probe was plugged in. If this key has two probe icons, it may need to be pressed twice to show the Temperature probe.


3. Depending on the configuration setting for the Ward's DataHub: Celsius or Fahrenheit; the Ward's DataHub will show the temperature reading in "°C" or "°F" units.

Using the Temperature Probe with the Ward's DataHub Analysis Software/App software

1. Open the Ward's DataHub Analysis Software/App software.
2. Make sure it is connected to the Ward's DataHub via USB or Bluetooth communication.



3. Click the SETUP icon to open the *Logger setup* dialog box:

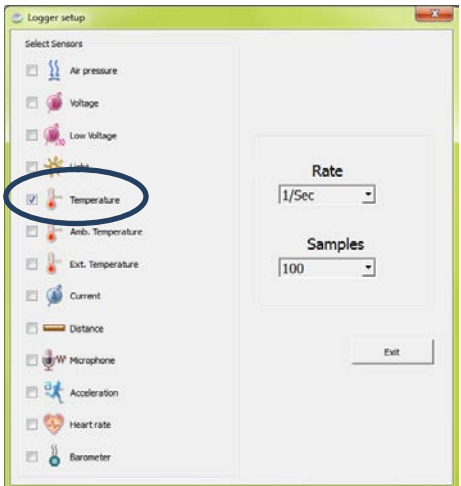

- . The Temperature probe is automatically identified by the software.
- . To select this probe, simply click on selection button to the left of the Temperature icon.